

Dräger Live Fire Training Fire Extinguisher Trainer – the TUTOR

Train the proper use of fire extinguishers in a safe, effective and environmentally acceptable manner. The TUTOR provides two available flame sizes for varying training stages. Various props are available to mount on the TUTOR.



OSHA and CERT in the USA as well as Fire Safety Plan Requirements in Canada clearly point out the importance of fire extinguisher training.

TRAINING AREA

Dräger's TUTOR fire extinguisher training simulator provides for an excellent set-up to safely practice the use of manual fire extinguishers. The task is to extinguish gas-fired flames in a fire pan. The success of the extinguishing action is being determined by the trainer who switches the fire on and off.

SCOPE OF TRAINING

The TUTOR enables the realistic simulation of a multitude of fire scenarios.

Different mockups are available to simulate fires, for example:

- Waste basket
- Electric motor
- Flammable storage locker
- Range top

For details on available props and further accessories, please see the reverse side of this data sheet.

EQUIPMENT

The Dräger TUTOR has been specifically designed for training with manual fire extinguishers. Completely manufactured using polished stainless steel, the TUTOR offers an outstanding warranty of 5 years (60 months).

The TUTOR has been designed to be transported by utility vehicle (pick-up), utility trailer or by a van. The unit comes with 12 VDC 30 Amp-hour battery power and a 43 lb propane cylinder on-board the cart. Water to fill the pan once before use of the TUTOR remains to be provided on-site.

SAFEGUARDS AND CONTROL


Every TUTOR fire extinguisher trainer is equipped with a tethered remote control with emergency cut-off switch. All TUTOR units are individually inspected and tested.

THIRD PARTY APPROVAL

The TUTOR is assembled under factory approval of CSA International, a recognized 3rd party authority (Certificate of Compliance no. 1811189) and bears the respective CSA marking. For more information visit www.csa-international.org.



fire extinguisher training
realistic simulation for safe practice

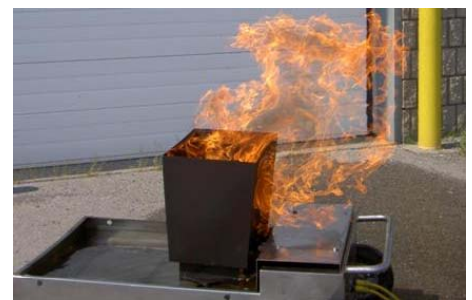

waste basket prop
different mockups can be used



mobility and storage
designed for ease of handling and transport

TECHNICAL DATA

| | Burn Pan | Supply Cart |
|-------------------------|---|---|
| Dimensions (approx.) | 26" W x 47" L x 16" H | 26" W x 15" L x 40" H |
| Weight (approx.) | 65 lbs | 65 lbs (without propane cylinder) |
| Flame Area (approx.) | 6.2 sq ft | n/a |
| Flame Height | two available flame sizes | n/a |
| Fabrication | 16 gauge, polished stainless steel; reinforced corners | 16 gauge, polished stainless steel |
| Battery | n/a | 12 V DC, gel filled, 30 Amp h |
| Charger | n/a | 120 V in, 12 V out; multi Amp charge output |
| Propane Tank | n/a | 43 lb tank without OPD restrictive valve |
| Performance | max. 1,200,000 BTU/h | n/a |
| Wheel Size | 10" rigid rubber | 10" rigid rubber |
| Prop Mounting Mechanism | two mounting pins for small props; large props fit pan; no bolting | n/a |
| Controls | "dead man" switch with single control button on 20' cable | (see Burn Pan) |
| Gas Hose | n/a | 20' long gas hose |
| Electrical Cable | n/a | 20' long electrical cable |
| Key Components | stainless steel, NRTL approved | Stainless steel, NRTL approved |
| Pilot | constant pilot system | n/a |
| Certification | Each unit is inspected and tested. The Tutor is assembled under factory approval of CSA International, a recognized 3rd party authority. Certificate of Compliance: 1811189. For more information visit: www.csa-international.org | |
| Warranty | 5 years (60 month) | |

ACCESSORIES

| | Waste Basket | Electric Motor | Range Top | Flammable Storage Locker | Storage/Transport Cases (set) | Spare 43 lb Propane Tank |
|-------------|-------------------------|------------------------|------------------------|---------------------------------|--------------------------------------|---------------------------------|
| Order No. | 4099901 | 4099902 | 4099903 | 4099904 | 4099910 | 4099861 |
| Dimensions | 18"L x 12"W x 18"H | 29"L x 13"W x 13"H | 26"L x 30"W x 40"H | 30" x 16"W x 63"H | 33" x 20" x 43"; each | 12.3" dia.; 32.5" H |
| Weight | 24 lb | 36 lb | 89 lb | 91 lb (198 lb w/ acc.'s) | 200 lb (set) | 33.9 lb (nom. tare) |
| Fabrication | 16 gauge steel | 16 gauge steel | 16 gauge steel | 16 gauge steel | alu frame; plywood | steel |
| Finishing | high temp paint ; black | high temp paint; black | high temp paint; black | High temp paint; black | durable plastic (blue) | paint; grey |
| Mounting | mounting receivers | mounting receivers | form fit to burn pan | form fit to burn pan | n/a | straps |



Distributor of Dräger

"Concern - Energomash" CJSC
 Azatutyan avenue 26/8, Yerevan 0014, Armenia
 Tel.: 20 97 77, 20 97 75, 20 97 74
 E-mail: info@c-e.am
www.edulab.am
www.analytica.am, www.c-e.am